



**RV Kits**

**Models:** Paramounts built prior to September 1, 2008.  
**Purpose:** To prevent the awning from over extending causing the arm elbows to lock out.  
**Summary of Work:** For each arm: Remove existing spacer from elbow, add additional spacers.

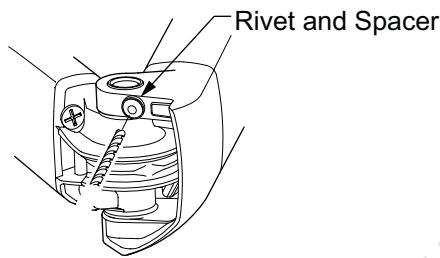

Drill Out the Existing Rivet and Spacer

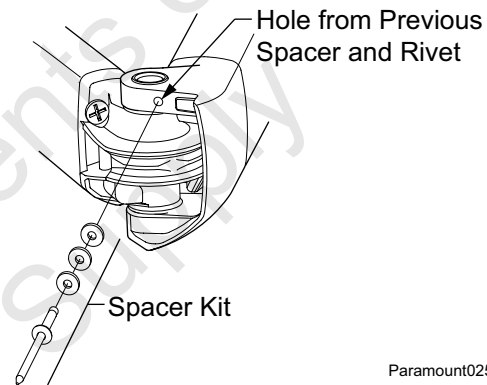

Paramount025

1. Open the awning 12"-14" past the slide out room position to provide access to the long arm elbows.
2. Using an 1/8" drill bit, drill out the existing rivet and spacer and discard.

**⚠ CAUTION**

**DO NOT ATTEMPT TO PULL THE ELBOW JOINT OUT OF THE ARM EXTRUSION. THE SPRINGS ARE UNDER TENSION.**

3. In the existing hole, attach the three (3) spacers to the elbow using the furnished pop rivet.
4. Repeat for both arms.

This Manual is Compliments of

# Northwest RV Supply

86325 College View Road  
Eugene, OR 97405

Local: 541-746-9092

Toll-Free: 866-678-7467

Fax: 541-736-5573

<http://www.nwrvsupply.com>  
[mail@nwrvsupply.com](mailto:mail@nwrvsupply.com)

Northwest RV Supply carries a large spectrum of surplus, used, and new RV parts and components. Please feel free to visit our website for additional information.